

# JBA<sup>®</sup> performance exhaust

## INSTALLATION INSTRUCTIONS

\*\* Installation recommendation: JBA recommends in most case that the vehicle be taken to a reputable exhaust shop for installation.

### 40-2618


#### 2011-14 Mustang V6 Axle Back

##### Parts List:

P/S Muffler/Tip assembly 1  
D/S Muffler/Tip assembly 1

##### Recommended Tools:

pry bar  
ratchet  
15mm deep socket  
Large channel lock pliers

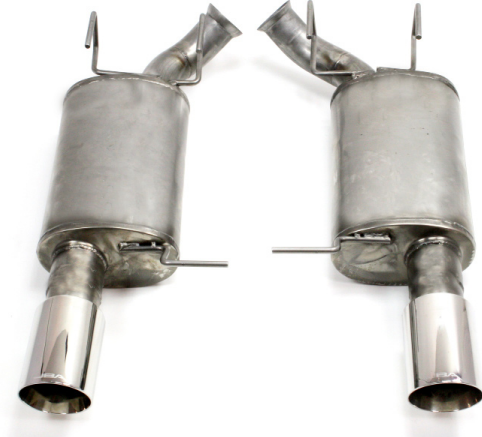

##### Start:

1. Remove and inventory the JBA Exhaust System.

2. Loosen the clamp connecting the exhaust pipe to the muffler. Wiggle the Muffler loose from the over axle pipe.


3. Using pliers or a pry bar, slide the rubber hanger from the hanger rod at inside, front of muffler (a little lube helps). Slide the muffler assembly forward and remove from slip hangers.



5. With the axle pipes in the muffler assemblies adjust mufflers to be flat, and the tips an equal distance from the bumper cover. You may need to use a pry bar and bend the hangar rods slightly. When you are satisfied with the placement, tighten the clamps securely.



4. Slide the JBA muffler/tip assemblies hangers into the rubber isolators on each side. WD40 or similar will make this easier.

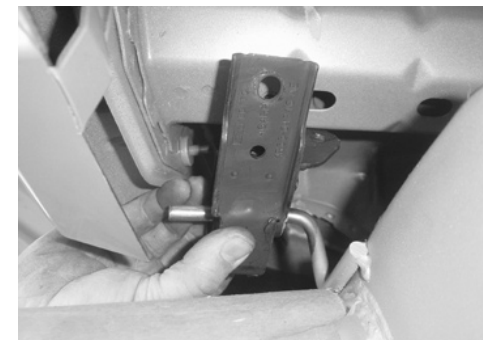

6. Using a soft cloth, wipe the new JBA tips clean.

To get more power out of your Mustang, JBA offers CARB Legal Cat4-Ward headers for the V6 cars. For more information about these and other quality performance products from JBA visit us online at [www.jbaheaders.com](http://www.jbaheaders.com)

