

EVOL™ EXHAUST SYSTEMS

INSTALLATION INSTRUCTIONS

**Installation recommendation: JBA recommends in most cases that the vehicle be taken to a reputable exhaust shop.


50-2628

2005 Mustang 4.0L



RECOMMENDED TOOLS:

- pry bar
- ratchet
- 15mm deep socket
- 9/16 deep socket
- channel lock pliers
- anti-seize
- spray lubricant or penetrating oil

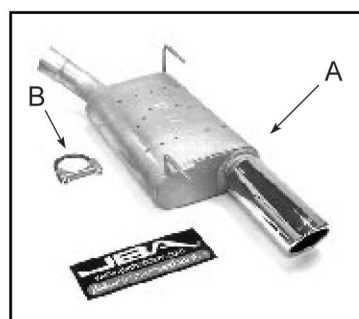

Parts List:

- A. P/S Muffler/Tip Assembly 1
- B. 2-1/2" Clamp 1

Start:

1. Remove and inventory the JBA Exhaust System.

2. Disconnect the negative battery cable and allow the exhaust system to completely cool.

3. Loosen the clamps attaching the exhaust to the pipe. Slide the clamps back to separate the two.



4. Loosen the clamps attaching the muffler to the intermediate pipe.



5. Wiggle the intermediate pipe out of the muffler pipes.

6. Slide the mufflers forward, out of the hangers. Remove from car.



7. Slide the JBA muffler/tip assembly (A) and (B) hangers in to the factory rubber isolators.



8. Slip the new JBA muffler/tip (A) on to the factory intermediate pipe. Make sure to align the key way on the intermediate pipe with the new JBA muffler



9. Install the supplied 2.5" clamps (C) over the muffler and intermediate pipe slip connection



10. Fit the intermediate pipe together and and tighten the factory clamp.



11. Check for proper alignment and adequate clearance around the new JBA tip. Tighten all clamps



12. Using a soft cloth, wipe the new JBA tip clean.

13. Reconnect the battery and start the vehicle to check for leaks.